
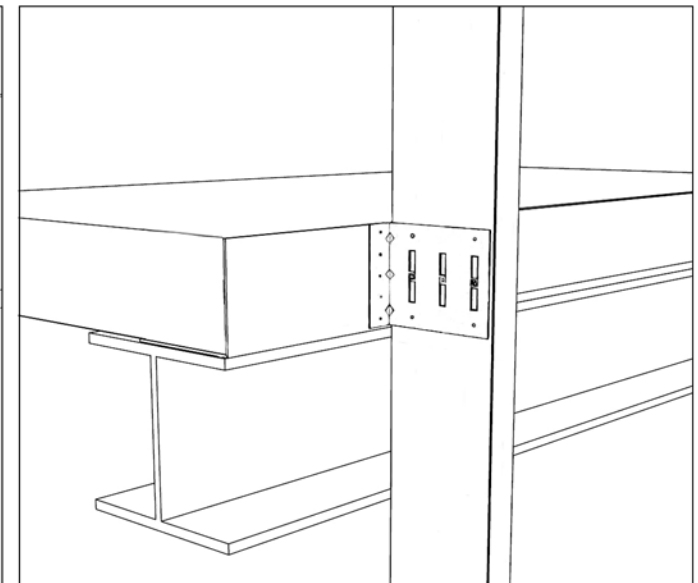
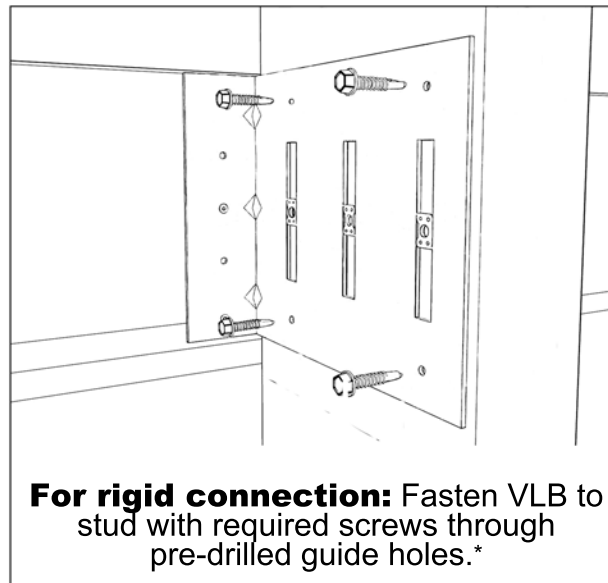
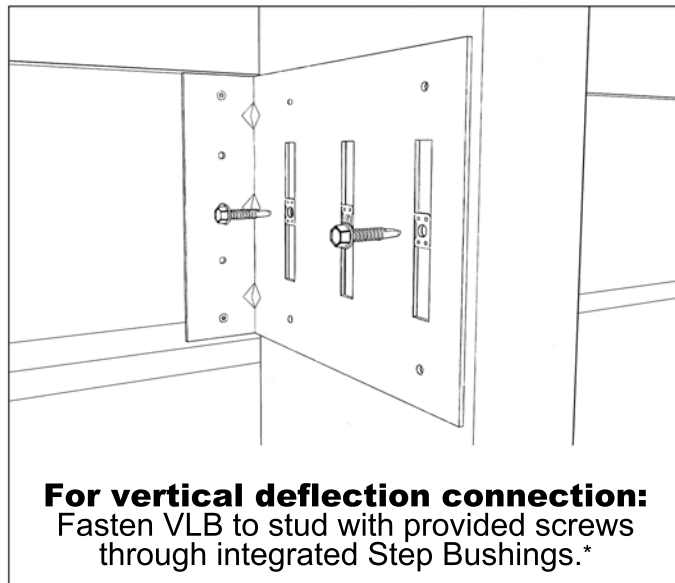
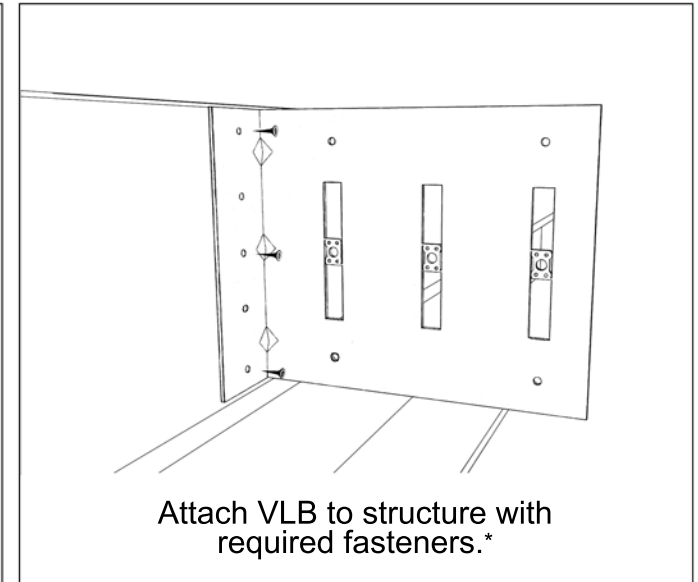
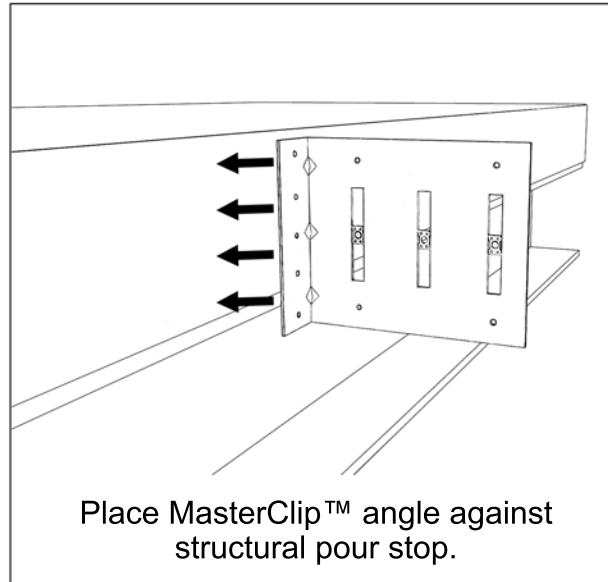


MasterClip™ VLB Installation Instructions

Vertical Deflection or Rigid Connection at Bypass Slab

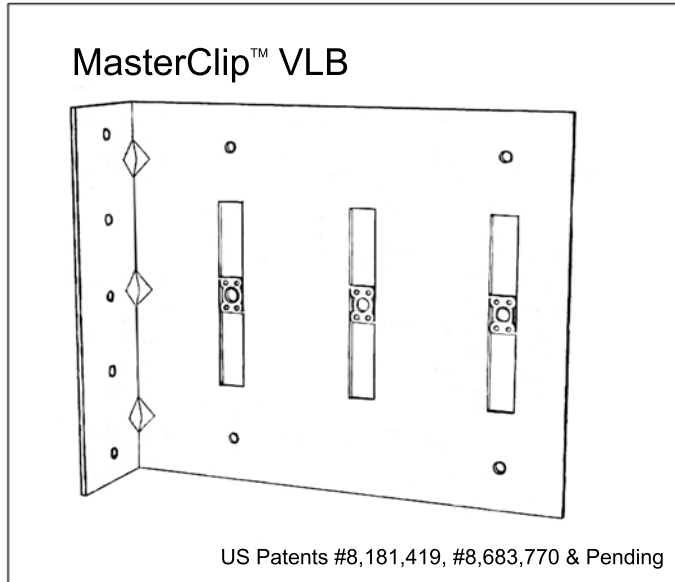

* Refer to project design requirements for required fastener quantity and placement. TSN provides (3) #12 screws for attachment through integrated bushings.