
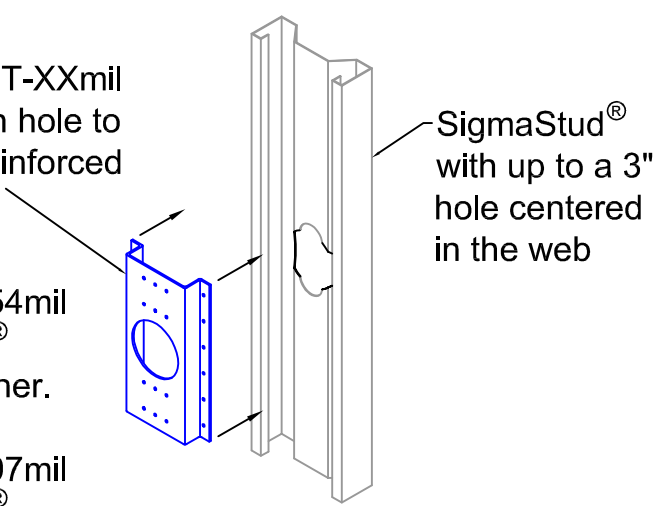


SigmaStud® Web Reinforcement: SG Web RFT Installation Instructions

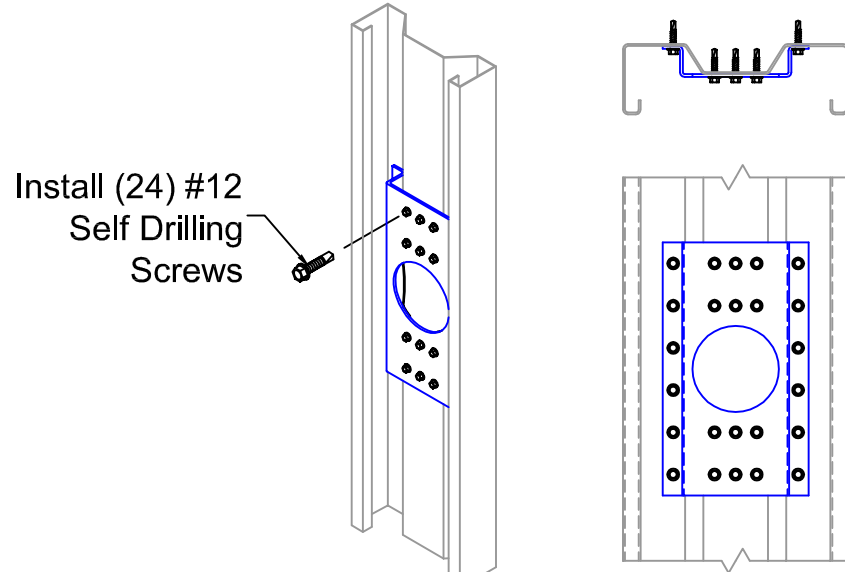

<p>1. Align SG Web RFT With SigmaStud®</p>	<p>2. Install (24) #12 Self Drilling Screws Through Guideholes.</p>
<p>SG Web RFT-XXmil aligned with hole to be reinforced</p> <p>SigmaStud® with up to a 3" hole centered in the web</p> <p>SG Web RFT-54mil for SigmaStud® 54mil and Thinner.</p> <p>SG Web RFT-97mil for SigmaStud® 68mil and Thicker.</p> 	<p>Install (24) #12 Self Drilling Screws</p> 
<p>* When Access to Guideholes is Limited, Install Screws Between Guideholes From Opposite Side.</p>	<p>For Installation, Technical, or Submittal questions, contact TSN at (888) 474-4876.</p> <p>Email us at tsn@steelnetwork.com.</p> <p>Visit www.steelnetwork.com and discover the value of each TSN Solution.</p>